


Aurora 9 Mode Change & Tension Adjustment Method

Mode 1 & 3 Setting to Mode 2 & 4 Setting

1. Pull out the rubber grip on the back side of Aurora 9 as picture 1 shown.

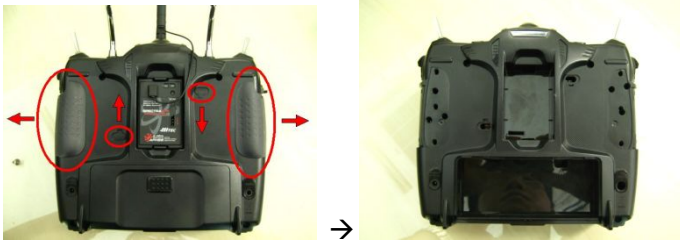


*** Warning!** For Acro & Heli Tension adjustment screw cap, lift up the back side of the Aurora 9's rubber cap gently with a fingernail. Do not pull out hard.


2. From Mode 1 to Mode 2 change you need to prepare a Philips(+) driver insert as picture shown below.



3. After Mode Changes you may want to adjust the tension of each gimbal.

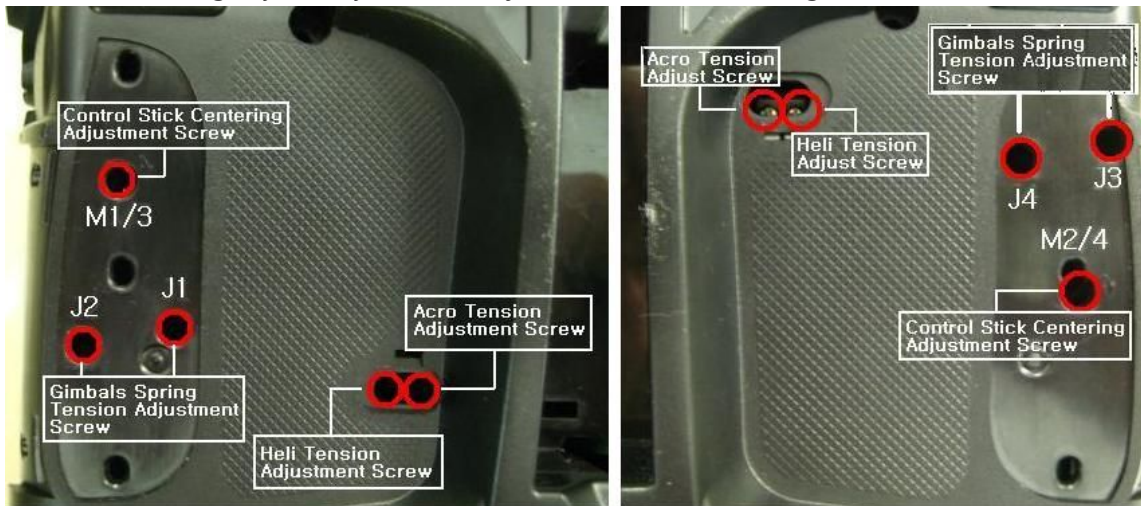

CW turning for more drag (tight feeling), **CCW** turning for less drag (loosen feeling)

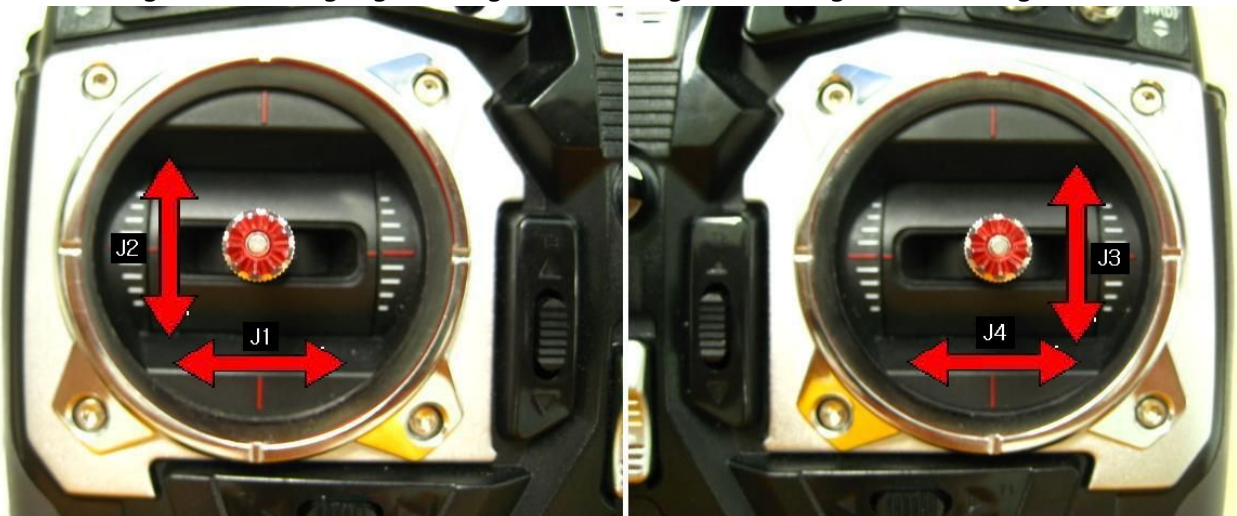


Mode 2 & 4 Setting to Mode 1 & 3 Setting

Do the opposite from Mode 1 to Mode 2 setting adjustment.

Heli Setting

For your Heli setting loose all 4 screws in the picture

- For Mode 1 Heli tighten screw No.1 all the way to CW.
- For Mode 2 Heli tighten screw No.4 all the way to CW.

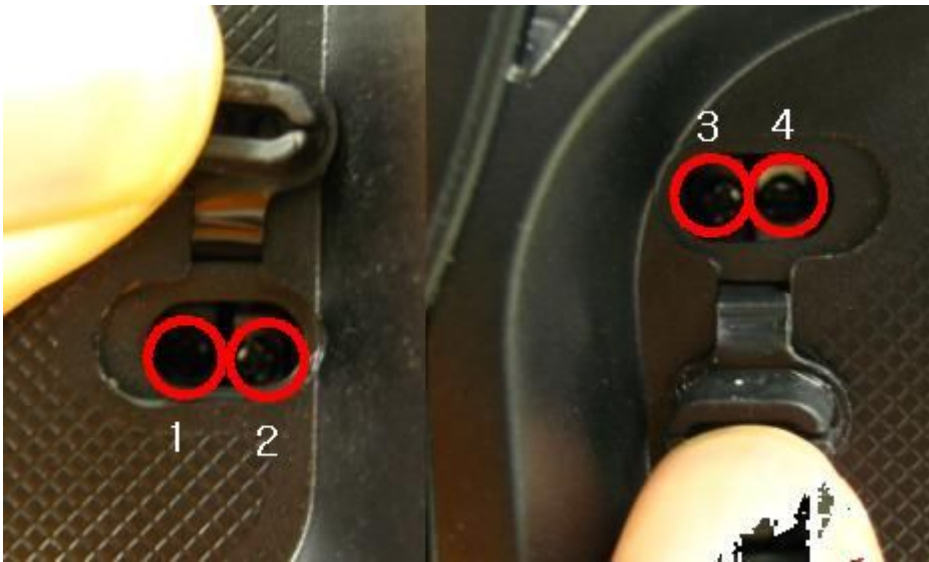

Acro Setting

For your Acro setting loose all 4 screws in the picture

- For Mode 1 Acro tighten screw No.2 all the way to CW.
- For Mode 2 Acro tighten screw No.3 all the way to CW.

